 


Service Mode

 
THIS DISHWASHER IS PROGRAMMED WITH A SERVICE MODE TO AID THE TECHNICIAN IN TROUBLESHOOTING THE DISHWASHER. EACH COMPONENT MAY BE CYCLED TO DETECT IF IT IS FUNCTIONING CORRECTLY. COMPONENTS ARE CYCLED BY PRESSING KEYPADS TO THE RIGHT OR LEFT OF THE START/RESET KEYPAD. DETERMINE WHICH TYPE OF CONTROL PANEL IS PRESENT (FLAT OR BOWED) AND THEN USE THE MATRIX BELOW TO DETERMINE HOW TO CYCLE EACH COMPONENT.

FLAT PANEL



○ Indicates Keypad Used Only on Some Models

BOWED PANEL



○ Indicates Keypad Used Only on Some Models

TO ENTER SERVICE MODE :

PRESS THE COOKWARE (POTS & PANS ON SOME MODELS) AND THE HEATED DRY KEYPAD SIMULTANEOUSLY FOR 3 SECONDS.

TO EXIT SERVICE MODE :

PRESS THE START/RESET KEYPAD AT ANYTIME TIME TO EXIT.

TRITON XL SERVICE MODE TEST MATRIX *

KEYPAD		DESCRIPTION	TIME in seconds**
PAD	CONTROL TYPE		
Keypads to the left of the Start/Reset keypad (Selections)			
1L	FLAT	Activates Drain Pump	75
	BOWED	Activates Detergent Module	
2L	FLAT	Activates Detergent Module	60
	BOWED	Activates Main Pump	
3L	FLAT	Activates Main Pump	75
	BOWED	Activates Heating Element	
4L	FLAT	Activates Heating Element	300
	BOWED	Activates Drain Pump	
5L	FLAT	Activates Water Valve (Length of time is model dependent)	50 or 71
	BOWED		
START/RESET Used to EXIT Service Mode			
Keypads to the right of the Start/Reset keypad (Enhancement/Extras)			
1R	FLAT	Activates the following in order: Status LEDs; Wash LEDs; Start/Reset and Option LEDs; finally "888" will be shown on the 3 digit display (some models)	3 seconds each cycle
	BOWED		
2R	FLAT	Opens Active Vent	
	BOWED		
3R	FLAT	Closes Active Vent	
	BOWED		

*NOTE : Service mode may be used for 30 minutes maximum. After 30 minutes the service mode will automatically turn off.

**NOTE : Component will be activated for indicated time. Component may be deactivated by pressing the same keypad that was pressed to activate the component.